

HOW TO CHANGE THE MOTOR




STEP 1.
Take out filter cover
and air diffuser.



STEP 2.
Unscrew bolts.



STEP 3.
Open wire cover.

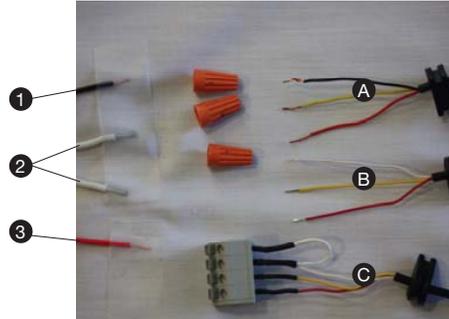

STEP 4.
Find out which type of power source
connector is equipped in the following
picture. Connectors are on the right
side.

Left Side:

Wires from Motor and Lamp

- ① Black: Motor's negative wire (-)
- ② 2 White wires: for lamp
(No polarity)
- ③ Red: Motor's positive wire (+)

Right Side:

Power Source Connector

- Ⓐ type: Black, Yellow, Red
- Ⓑ type: White, Yellow, Red
- Ⓒ type: White, White, Yellow, Red



STEP 5.
Disjoint Red and Black wires by twisting wire
caps counterclockwise Ⓐ type and Ⓑ type
connector, or by pressing the corresponding
button for Red and Black wire on Ⓒ type.

Continued to Back →

BAUUSA™

36-15 214th PL, Bayside, NY 11361
973-904-3200 www.bauusa.com

HOW TO CHANGE THE MOTOR




STEP 6.
Take out motor



STEP 7.
Mount new motor by inserting wires through the hole first




STEP 8.
Screw the bolts back

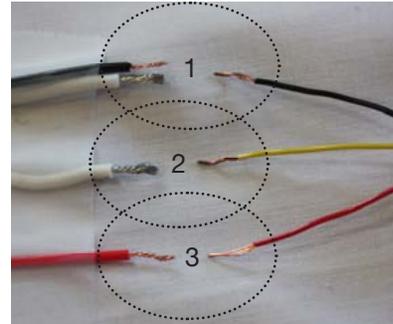

STEP 9-1.

Connect wires: (A) and (B) type

1. Connect Black wire from motor and any one White wire from lamp to the Black wire of (B) connector (or the White wire of (B) connector).
2. The other White wire from lamp and the Yellow wire of (A) or (B) connector are already connected.
3. Connect the Red wire from motor to the Red wire of power source connector.

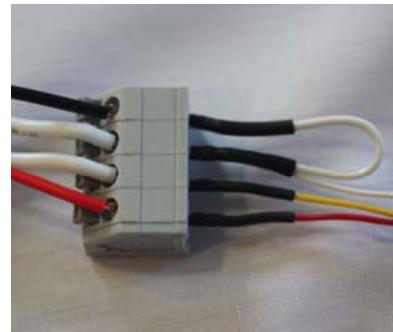

STEP 9-2

Connect wires: (C) type

1. Connect Black wire from motor into the top hole (White wire) by pressing corresponding button
2. Connect Red wire from motor into the bottom hole (Red wire) by pressing corresponding button

BAUUSA™

36-15 214th PL, Bayside, NY 11361
973-904-3200 www.bauusa.com